
 


S9060


Ignition light switch

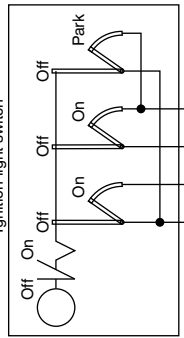


F9200
Fuse box
15A
F2




K9803
Double relay base
Motronic/Load relief relay
K9109
Load relief relay

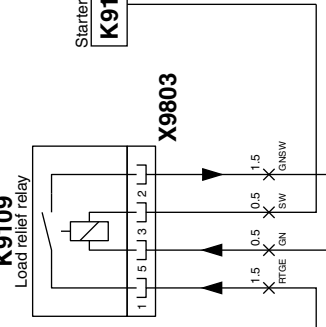


K9130
Starter relay

 

A9001
Instrument cluster
H9031
Turn signal indicator lamp

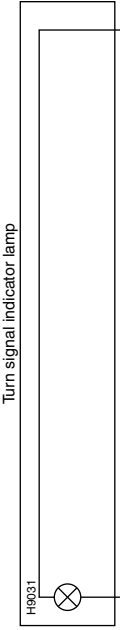


Battery positive
X9230

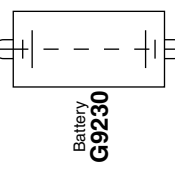

Battery
G9230

Battery ground
X9231

H9150
Horn

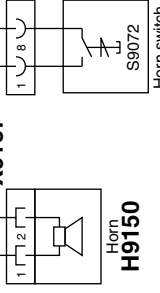

S9072
Horn switch

Left combination switch
S9070

X9488

X9401

X9484

X9028

X9157

X9037

X9046

X9047

X9057

X9020

H9030
Turn signal indicator
front left

H9035
Turn signal indicator
rear left

H9045
Turn signal indicator
rear right

H9040
Turn signal indicator
front right

A9020
Flasher unit

Left turn signal switch
S9073

Left combination switch
S9070